














OPR 3301 / Program VARE/VARE spring-telling

ZZ		
PR	Clear all suffixes	
PE	Norwegian	
E2	UPC-A, Leading zero, transmit CD	
MZ	Preamble	
0B	B	
0A	A	
0R	R	
PS	Postamble	
7Q	Enter ( Numeric keypad )	
ZZ		

AutoData Norge AS