



Programmeringsark for OPR 2001 / 3201

Program: VARE / VARE spørring-telling

SET		
USB HID		SU
Norwegian		PE
UPC-A, Leading zero, transmit CD		E2
Preamble		MZ
B		0B
A		0A
R		0R
Postamble		PS
Enter (Numeric keypad)		7Q
Enable auto trigger		+I
END		